



A Benny Lee Company


# PRODUCT USER GUIDE

## EH-48-5N-MU

### Indoor/Outdoor Heavy Duty AC to DC Wall Mount Power Supply with Site©entri DC-RMCU Owners Guide

*(These instructions are intended for use by a technician familiar with electronic products)*

- Input Voltage 90 to 264 VAC
- NEMA 4X Enclosure
- Low Voltage Disconnect
- Internal Battery 12v / 7 Amp-hour X 4 (48) Powersonic PS-R1270-F2 or Equivalent
- Site©entri DC Remote Monitoring and Control Unit (Accessory kit not supplied with EH-48-5N-MU)
- Configured to monitor Line Voltage, PS Current, PS Voltage, Battery Voltage, Output Voltage, Load 1 Voltage, Temperature, and DC-OK signal via internet.
- Monitor via Internet Browser or Configure Alarms to send emails and SNMP Traps
- 10/100 Ethernet Connection
- Output with 5 Fuse Distribution Block
- AC Input Breakers (included)
- Maximum Internal working Temperature -25c~+70c
- 3 year warranty

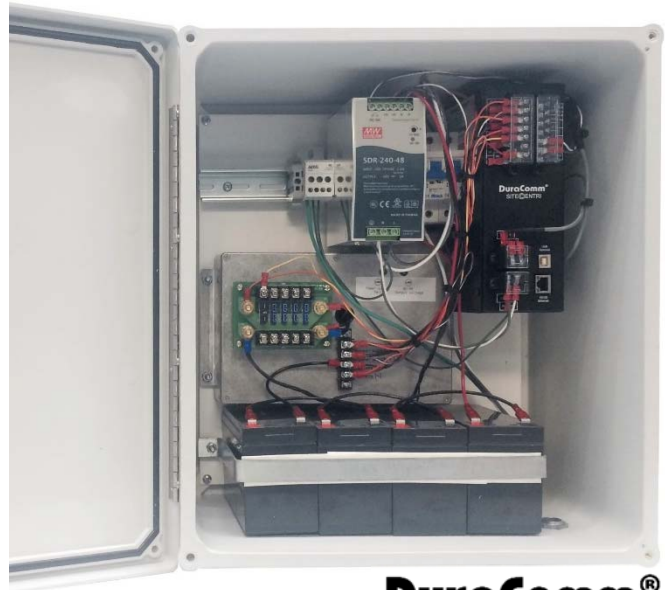

**DuraComm®**  
SITE©ENTRI

#### DESCRIPTION

The Environmentally Hardened EH-48-5N-MU is a weatherproof power supply with Low Voltage Disconnect and Batter Backup, housed in a fiberglass NEMA 4X enclosure, which is dust-proof and moisture-resistant. A Site©entri Remote Monitoring and Control Unit is included which allows monitoring of PS current, PS Voltage, Battery Voltage, Output Voltage and Load 1 voltage, as well as temperature and AC Line voltage. By using a standard internet browser you can monitor all of the inputs, and configure the EH-48-5N-MU to send emails when the Analog Voltages, DC-OK or other alarms, or temperature are out of limits. It can log readings to an internal micro-SD card as well, which are time-stamped with a real-time clock. SNMP traps can also be configured. See the DC-RMCU Site©entri Owners guide for full details and specifications.

## **SPECIFICATIONS**

Output Voltage .....	54.7 VDC
Output Voltage Tolerance.....	+/- 1 %
Output amperage .....	3 Amps Continuous, 5 Amps Maximum
Maximum Power, continuous .....	200 Watts
Maximum ripple and noise.....	150 mV p-p max
Input Voltage .....	90 to 264 VAC
Input frequency range .....	47-63 Hz
Maximum AC Current.....	4 A/120 VAC; 2 A/240 VAC
Typical Efficiency.....	84 pct
Max inrush current, single cycle .....	35 Amps
Short Circuit protection .....	Fold back Limiting
Overload Protection (operates) .....	typical 110-120 pct
Line Regulation .....	50 mV
Load Regulation .....	100 mV (20-100 pct load)
Over Temperature .....	>195 F (90 C) auto output shutdown
Rise Time following ON.....	50mS
Hold Time following OFF.....	10 mS
Working Temperature range.....	-13~ +158F (-25~70C)
Storage Temperature .....	-40 ~ +185 F (-40~+85C)
Withstand Voltage* .....	1.5 KV @ 10ma (I/P-O/P, I/P-FG)/1 min
Continued .....	500 V @ 10 ma (O/P-FG)/1 min
Dimensions.....	18"H x 16"W x 9"D inches
Weight .....	41 lbs

## **BATTERY BACK UP & CHARGER**

Auto-revert to battery or power supply .....	Provided by dual Shottky diode in OR configuration
Maximum output current in battery mode .....	10 Amps (limited by 10 Amps breaker)
Maximum Charger Voltage.....	55.2 VDC
Maximum Recharger Rate.....	2 Amps Float Charger
Visual Indication .....	LED indication: Red = AC Fail or Power Supply Fail, Green = DC Output Okay

## **LOW VOLTAGE DISCONNECT & AC FAIL RELAY**

Maximum Interrupt Current / Continuous Current.....	10 Amps DC
Disconnect Voltage .....	44 VDC
Reconnect Voltage .....	50 VDC
Disconnect Delay .....	2 minutes @ less than preset disconnect voltage
AC Fail Relay .....	Normally Open Contact

## **Site@entri**


All specifications..... See Site@entri Users Guide

## **INSTALLATION WARNING**

The individual user should take care to determine, prior to use or installation, whether this device is suitable, adequate or safe for the use intended. Since individual applications are subject to great variation, DuraComm makes no representation or warranty as to the merchantability, suitability or fitness of these units for any specific application.

**DO NOT** block any of the cooling vents on the sides and always allow adequate ventilation by not installing the unit inside tightly closed spaces. Physical mounting position is not critical but the cooling vents must not be blocked. Make certain the input voltage switch is set to the correct voltage BEFORE applying AC power.

# INSTALLATION WIRING DIAGRAM

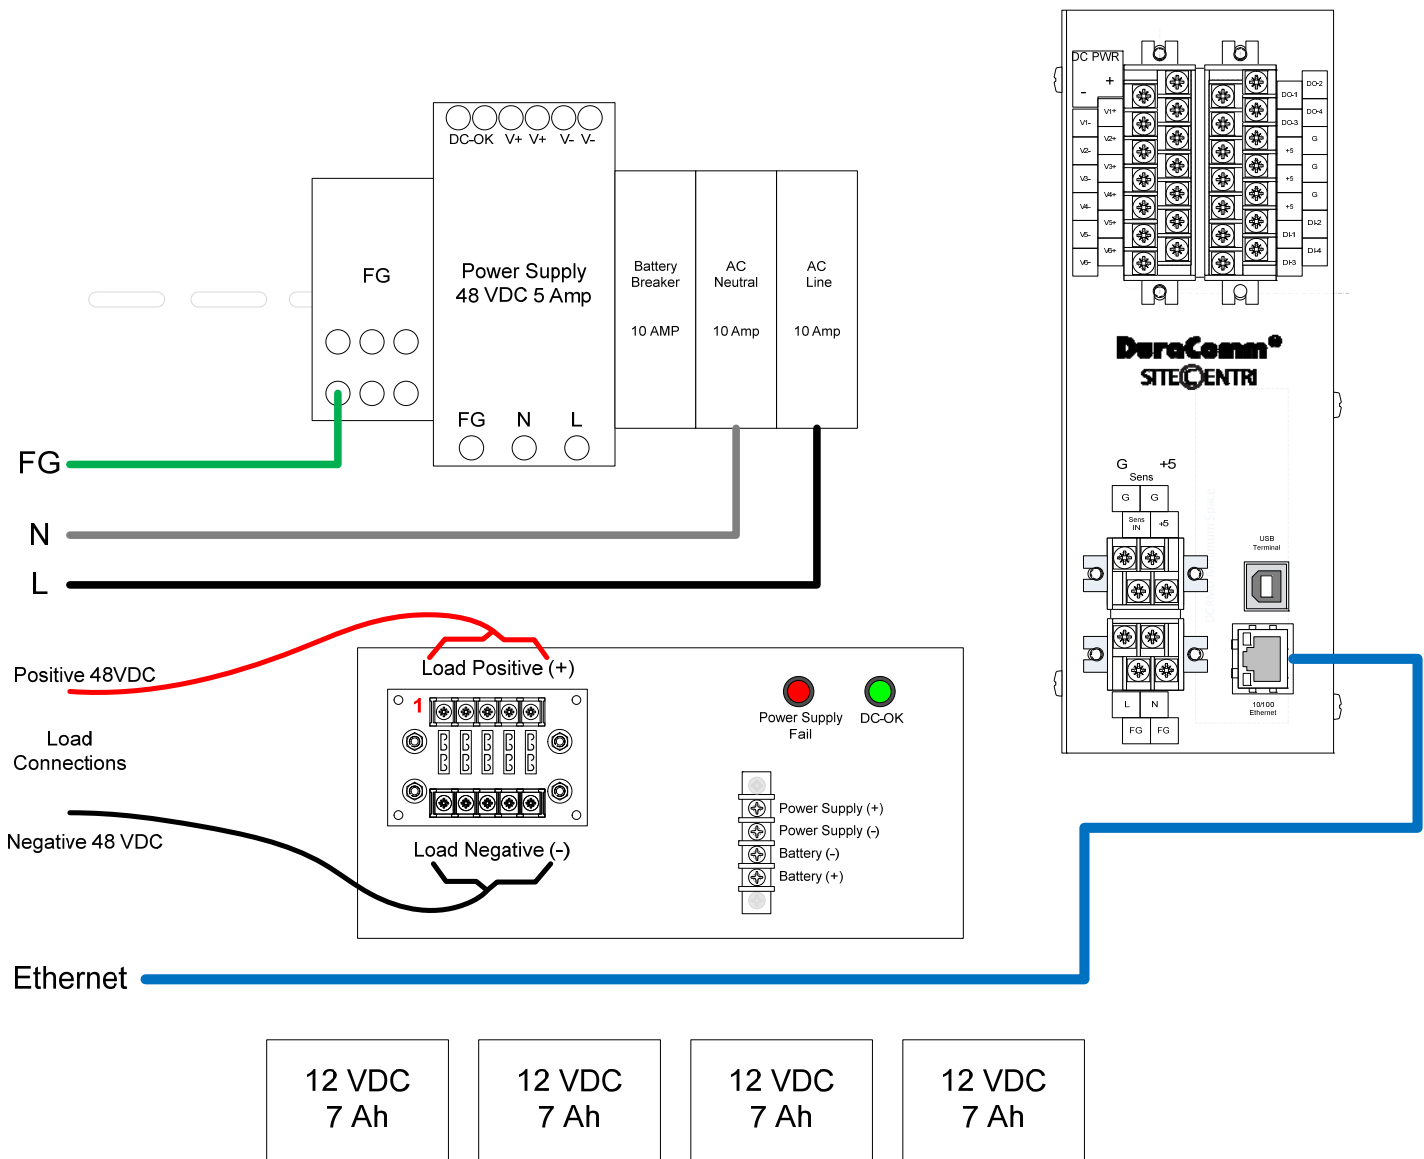

Turn off the battery and AC Breakers in the EH-48-5N-MU

Connect the EH-48-5N-MU to the AC Line as shown in the diagram above.

Connect your 48 VDC equipment to the load circuits. Load circuit 1 is wired to analog input 4 (V4) on the Site@entri. Input 5 (V5) is open for your use. See the Site@entri Owners guide for detailed specifications.

Connect the LAN port on the Site@entri in the EH-48-5N-MU to your network.

Apply external power to the EH-48-5N-MU , then switch the AC Line and Neutral Breakers to ON, and switch on the Battery Breaker.

Follow the instructions in the Site@entri Owners Guide for connecting to your Site@entri with a browser, and setting it up.

## CONDUCTOR PRETREATMENT

All kinds of copper conductors can be clamped without treatment. **DO NOT** solder tin stranded conductors. The solder yields and fractures under high pressure. The result is increased contact resistance and excessive temperature rise. Additionally, corrosion has been observed due to the fluxes. Notch fractures at the transition from the rigid tinned part to the flexible conductors are also possible. Ferrules can be used as a protection when wiring stranded conductors. Copper ferrules prevent the current transfer from being influenced by dissimilar metals and remove the risk of corrosion. Always use the correct tool to crimp the ferrule.

## RECOMMENDED COPPER WIRE SIZE FOR CURRENT CAPACITY

*(Insulated Wire, Single Conductor in free air)*

<u>Current Level in Amperes</u>	<u>Wire Size</u>
<7 AMPERES	20 AWG Up to 5 feet 18 AWG Up to 10 feet
14 AMPERES	18 AWG Up to 5 feet 16 AWG Up to 10 feet
20 AMPERES	16 AWG Up to 5 feet 14 AWG Up to 10 feet
30 AMPERES	14 AWG Up to 5 feet 12 AWG Up to 10 feet
40 AMPERES	12 AWG Up to 5 feet 10 AWG Up to 10 feet
50 AMPERES	10 AWG Up to 5 feet 8 AWG Up to 10 feet
70 AMPERES	8 AWG Up to 5 feet 6 AWG Up to 10 feet
100 AMPERES	6 AWG Up to 5 feet 4 AWG Up to 10 feet

## LIMITED WARRANTY

*DuraComm warrants to the initial end user, each power supply manufactured by DuraComm to be free from defects in material and workmanship, when in normal use and service for a period of three year from the date of purchase, from an authorized DuraComm dealer.*

*Should a product manufactured by DuraComm fail or malfunction due to manufacturing defect, or faulty component, DuraComm, at its option, will repair or replace the faulty product or parts thereof, which, after examination by DuraComm, prove to be defective or not operational according to specifications in effect at the time of sale to the initial end user. The product that is replaced or repaired under the provisions of this warranty, will be warranted for the remainder of the original warranty period, only, and will not extend into a new three year warranty period.*

*The limited warranty does not extend to any DuraComm product which has been subject to misuse, accidental damage, neglect, incorrect wiring not associated with manufacture, improper charging voltages, or any product which has had the serial number removed, altered, defaced, or changed in any way.*

*DuraComm reserves the right to change, alter, or improve the specifications of its products at any time, and by so doing, incurs no obligation to install or retrofit any such changes or improvements in or on products manufactured prior to inclusion of such changes.*

*DuraComm requires any product needing in or out of warranty service to be returned to DuraComm. All requests for warranty service must be accompanied by proof of purchase, such as bill of sale with purchase date identified. DuraComm is not responsible for any expenses or payments incurred for the removal of the product from its place of use, transportation or shipping expenses to the place of repair, or return expenses of a repaired or replacement product to its place of use.*

*The implied warranties which the law imposes on the sale of this product are expressly LIMITED, in duration, to the three (3) year time period specified herein. DuraComm will not be liable for damages, consequential or otherwise, resulting from the use and operation of this product, or from the breach of this LIMITED WARRANTY.*

*Some states do not allow limitations on the duration of the implied warranty or exclusions or limitations of incidental or consequential damages, so said limitations or exclusions may not apply to you. This warranty gives you specific legal rights which vary from state to state.*

*This warranty is given in lieu of all other warranties, whether expressed, implied, or by law. All other warranties, including WITHOUT LIMITATION, warranties of merchantability and fitness or suitability for a particular purpose, are specifically excluded. DuraComm reserves the right to change or modify its warranty and service programs without prior notice.*

DuraComm® Corporation

6655 Troost Avenue

Kansas City, MO 64131

Phone (816) 472-5544 Fax (816) 472-0959

[www.duracomm.com](http://www.duracomm.com)